

Can flow monitors be installed in any position, or must the flow direction be taken into account?

The flow monitors can be installed only in one flow direction. See arrow on the device. The recommendations for installation in the operating instructions must always be observed.