

Where can I find the pin assignment for the switching points?

They are contained in the data sheet and in the operating instructions.